




sani•expert™

SERVICE



Unplug the power cable before start servicing

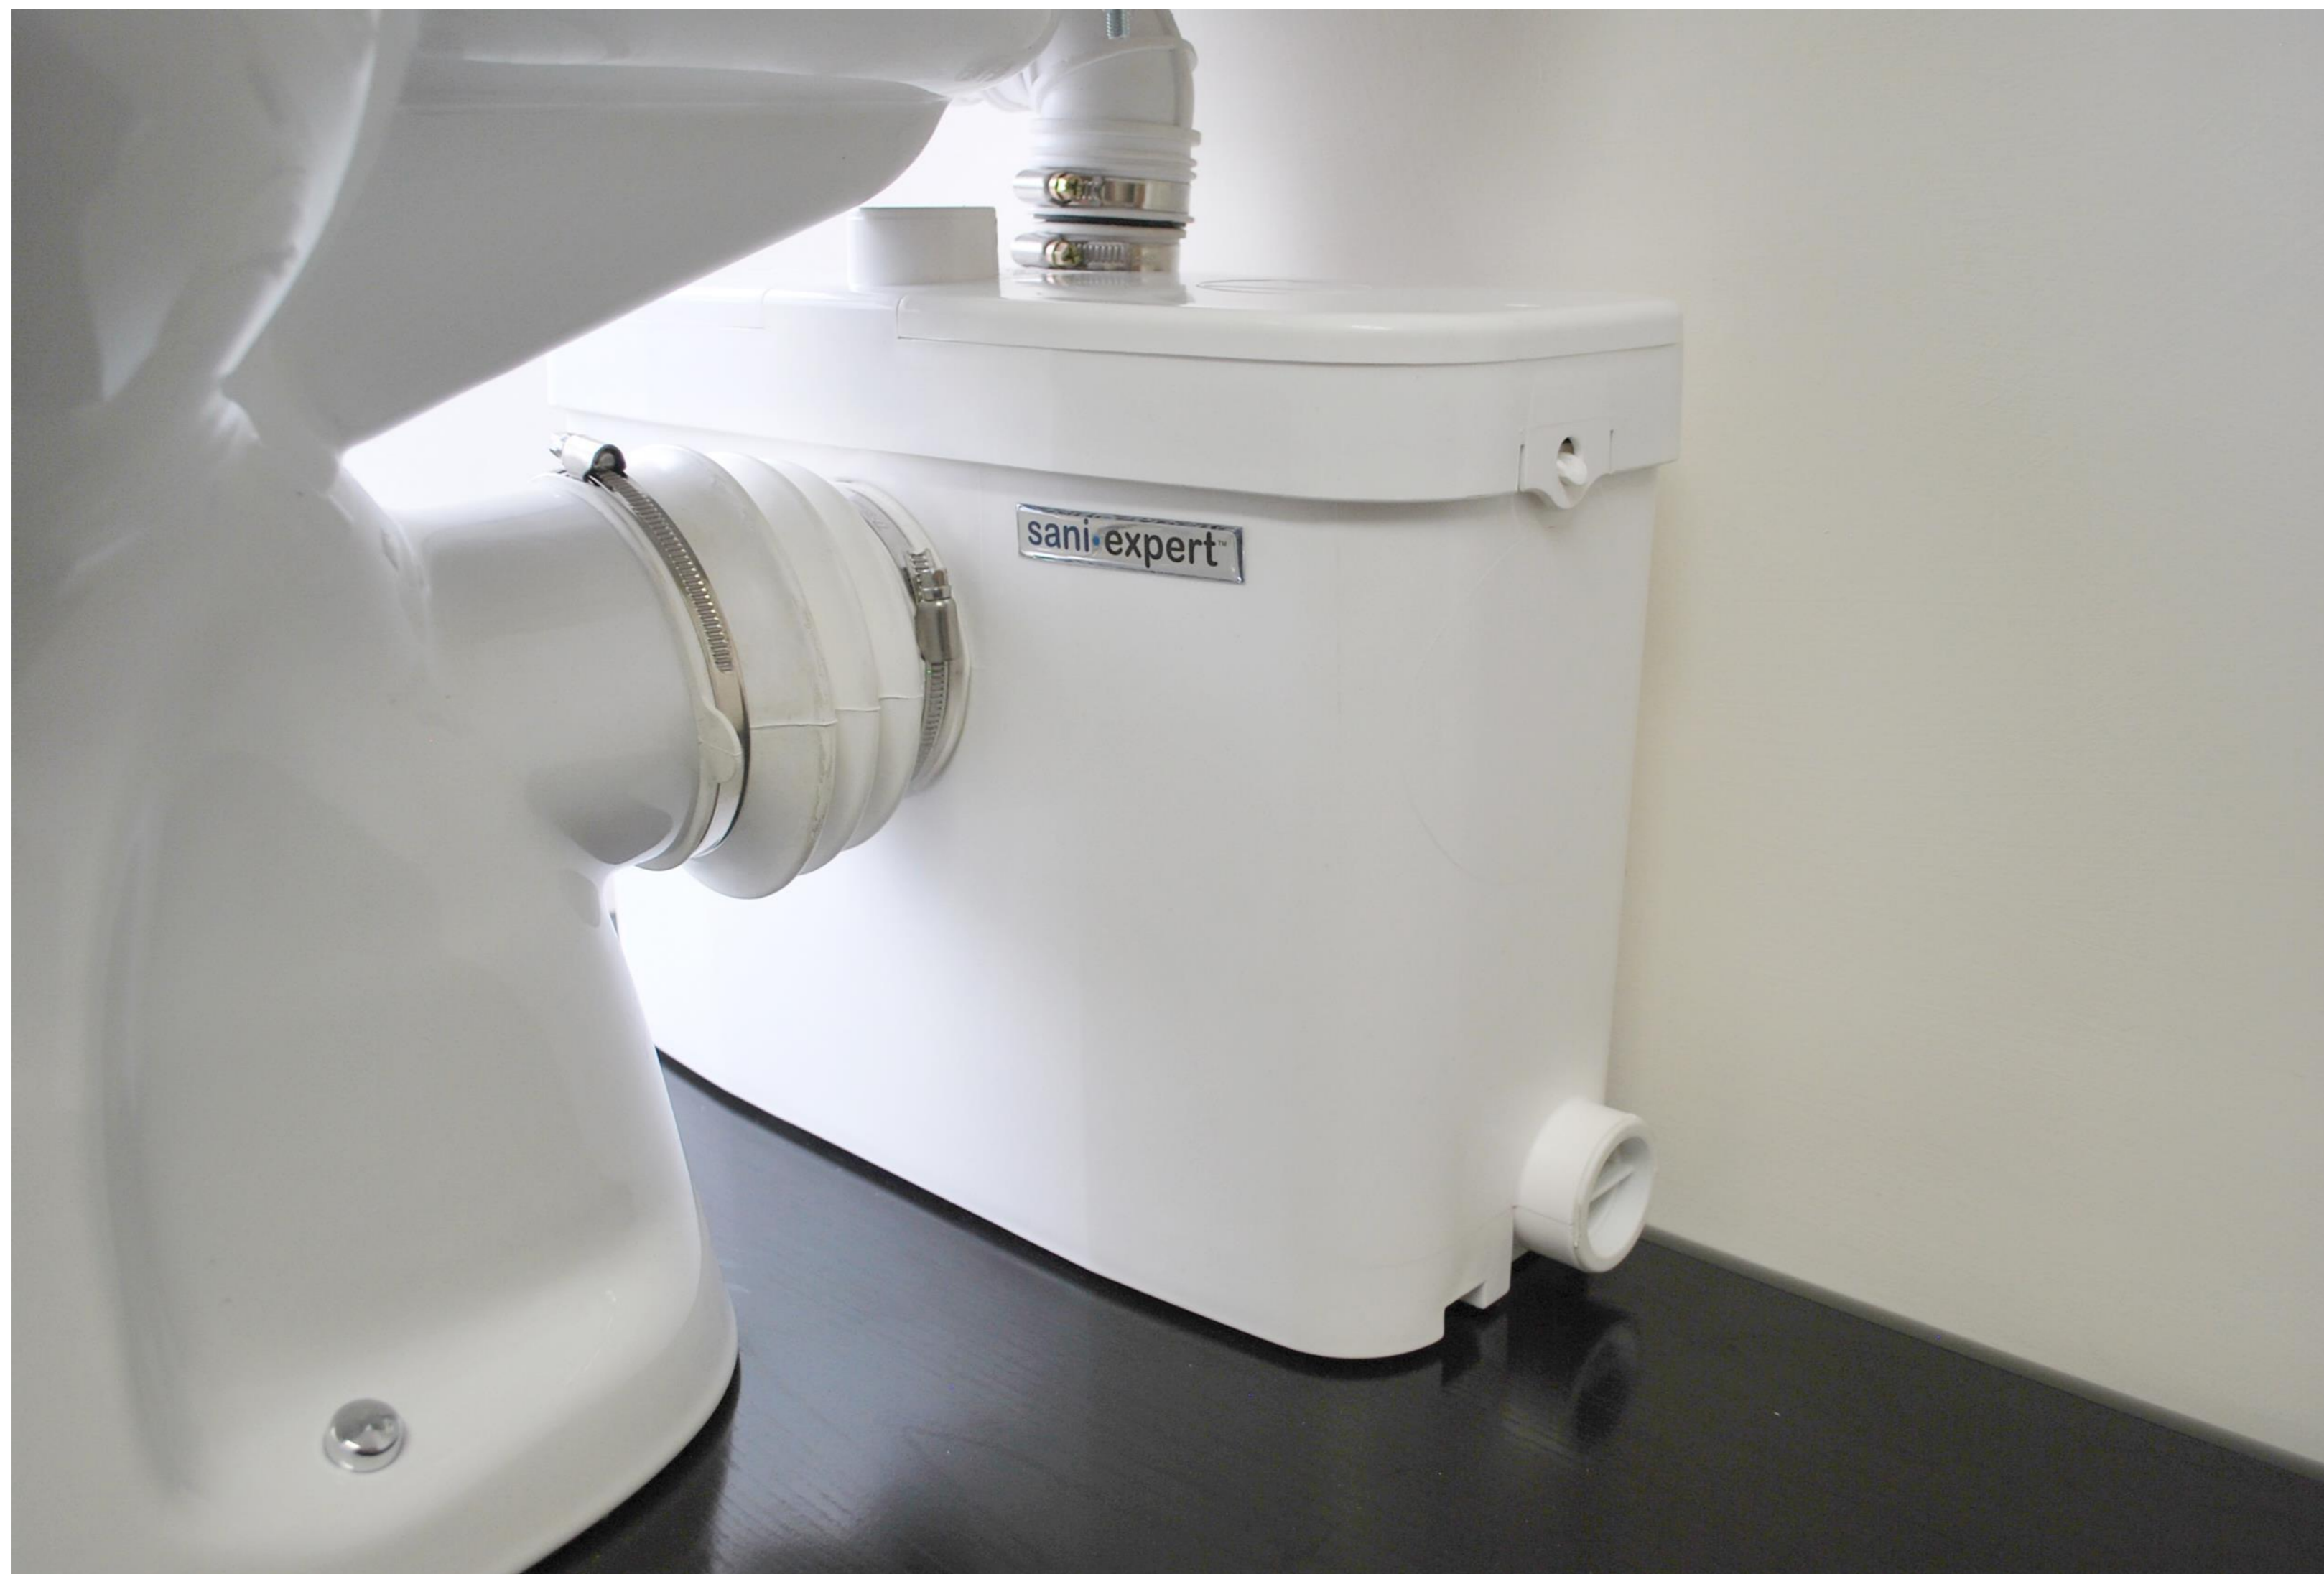

1. HOW TO REPLACE AND CLEAN THE CARBON FILTER

a. Unscrew the cap with the pump symbol 




b. Remove the cap



c. Remove the carbon filter using a flat screwdriver



d. Clean the filter only by using air pressure (do not wet it) or change it if needed (T-PF.P116)

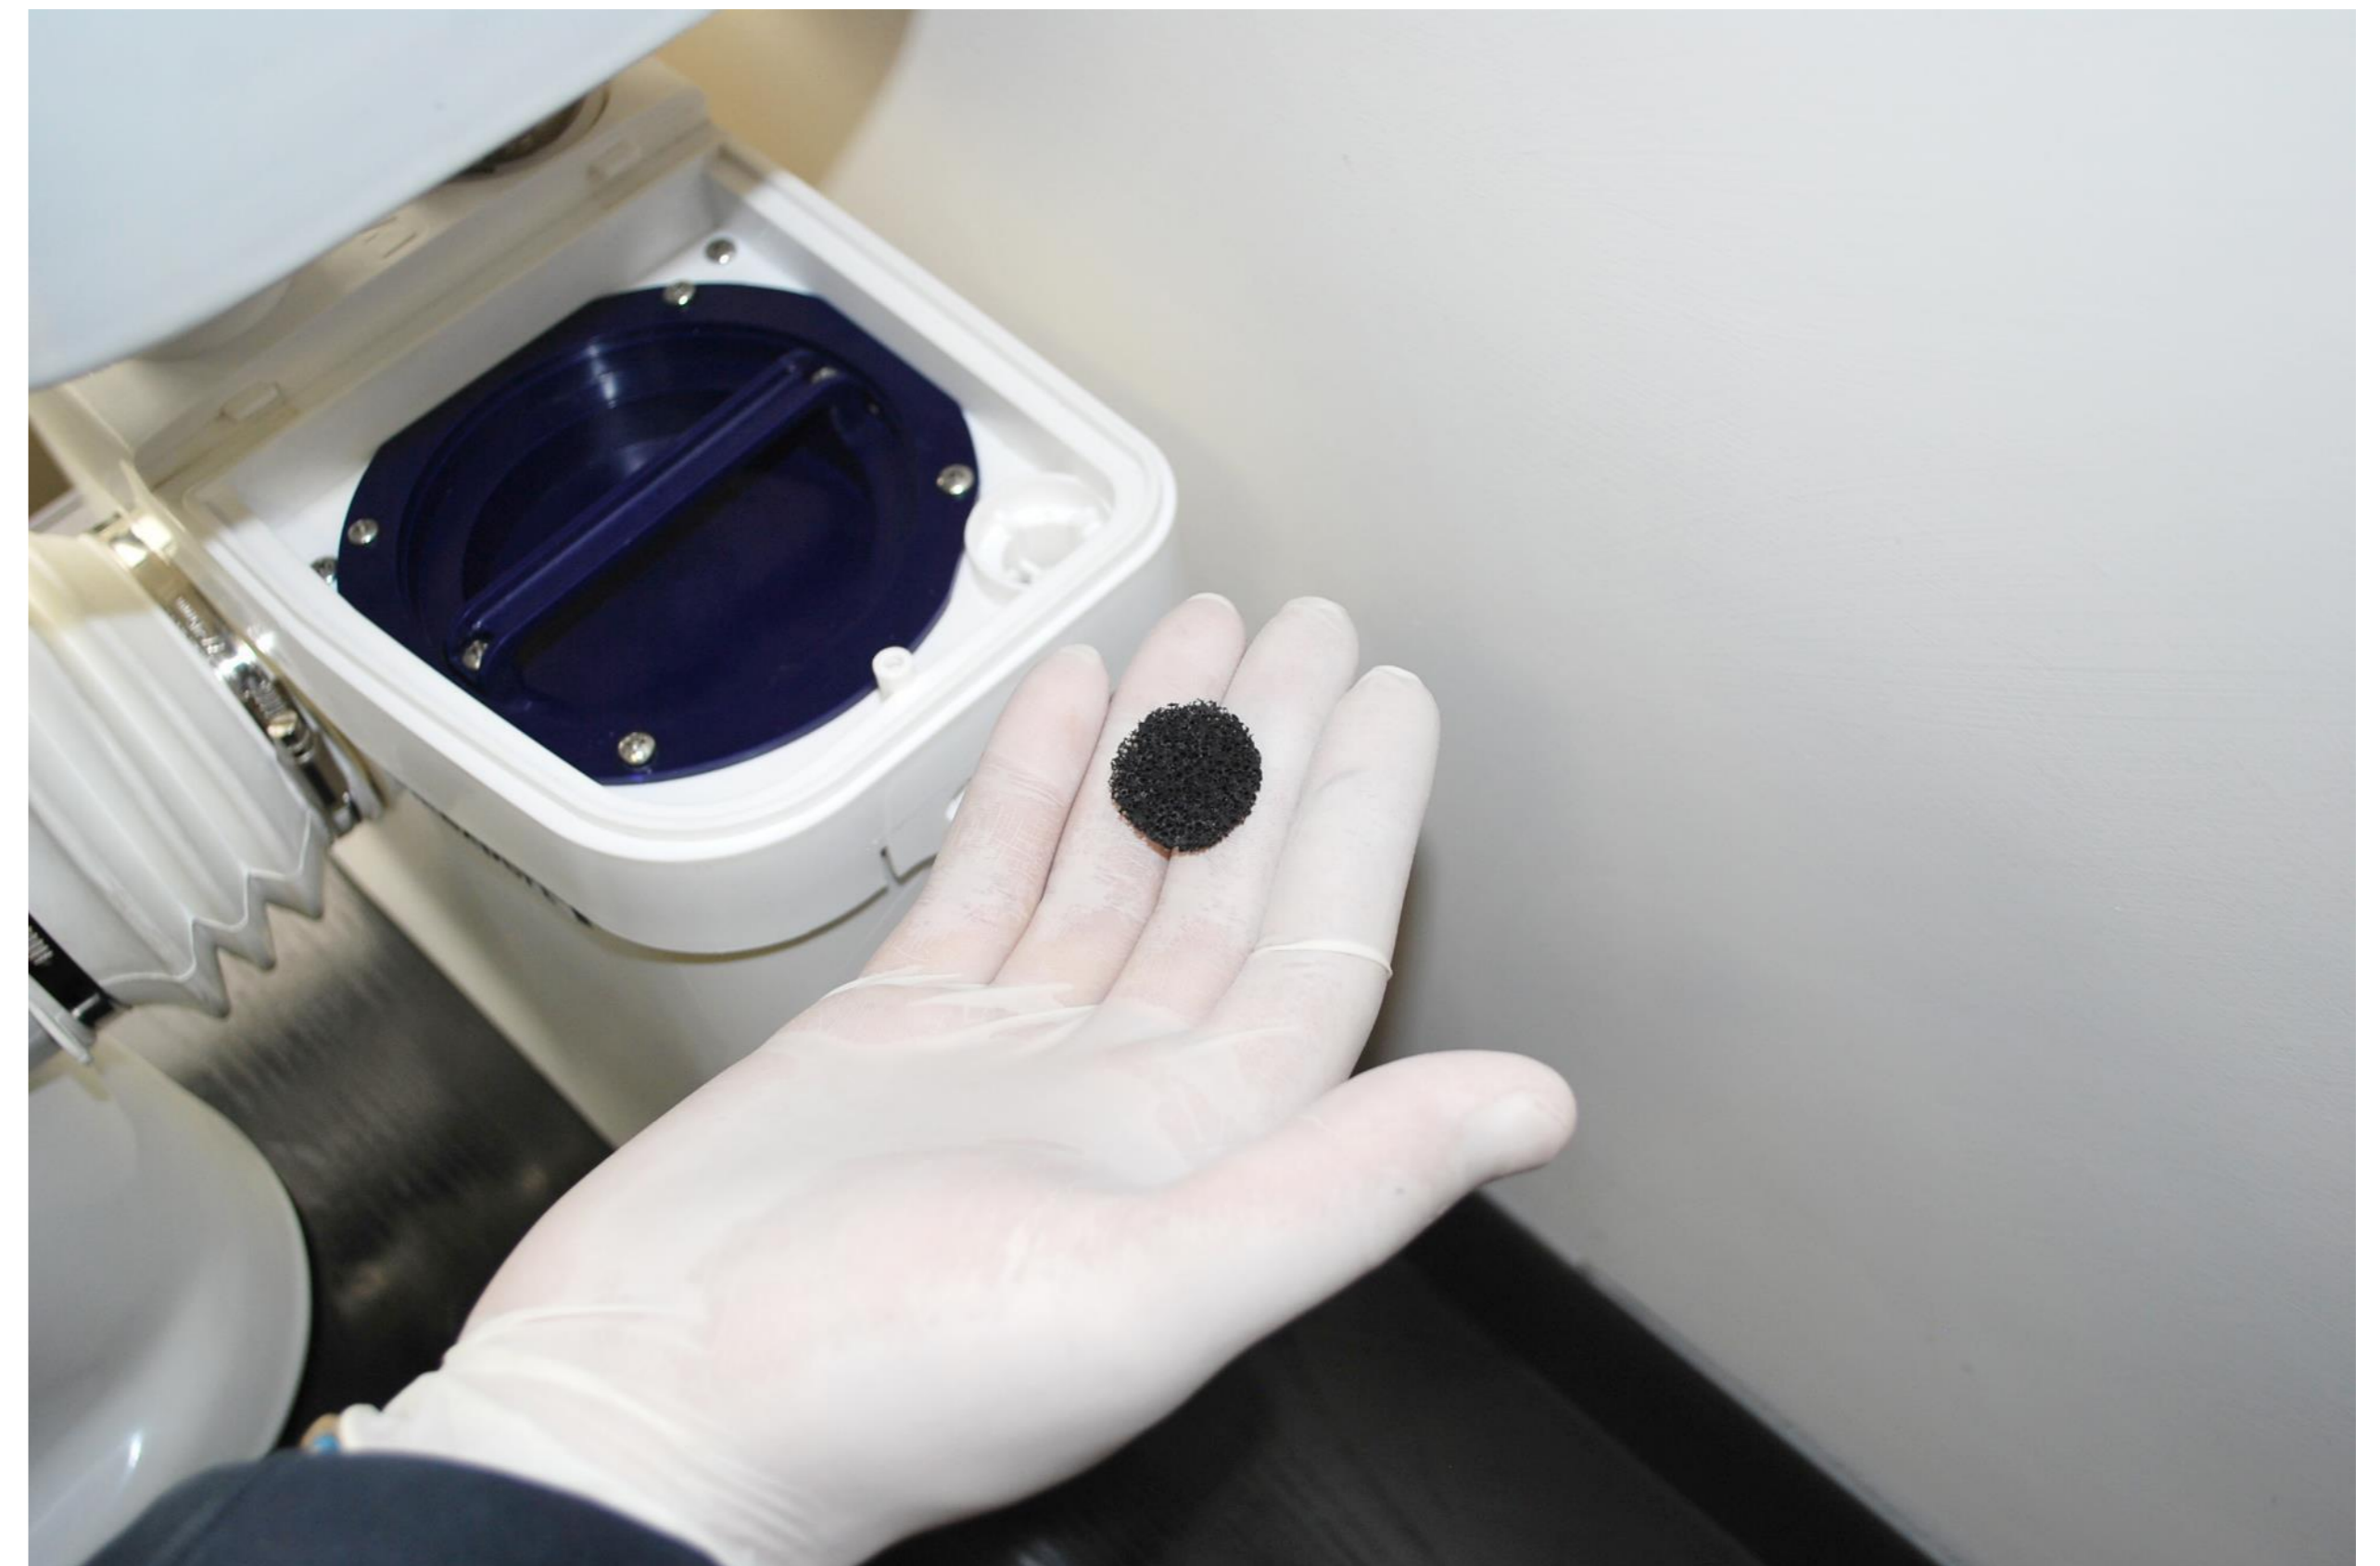

e. Once the maintenance is completed reassemble the unit following inverse procedure

2. HOW TO REMOVE A CLOG IN THE MACERATOR CHAMBER

a. Unscrew the cap with the pump symbol 



b. Remove the cap



c. Unscrew the macerator chamber cap



d. Remove the cap




e. Remove clogging parts (keep a bucket close to the unit)



f. Once the maintenance is completed reassemble the unit following inverse procedure

2 b. CLOGGING NOT IN THE MACERATOR CHAMBER > CONTACT SERVICE

3. HOW TO REPLACE THE MICRO SWITCH


a. Unscrew the cap with the switch symbol 



b. Remove the cap




c. Take off the micro switch from its support

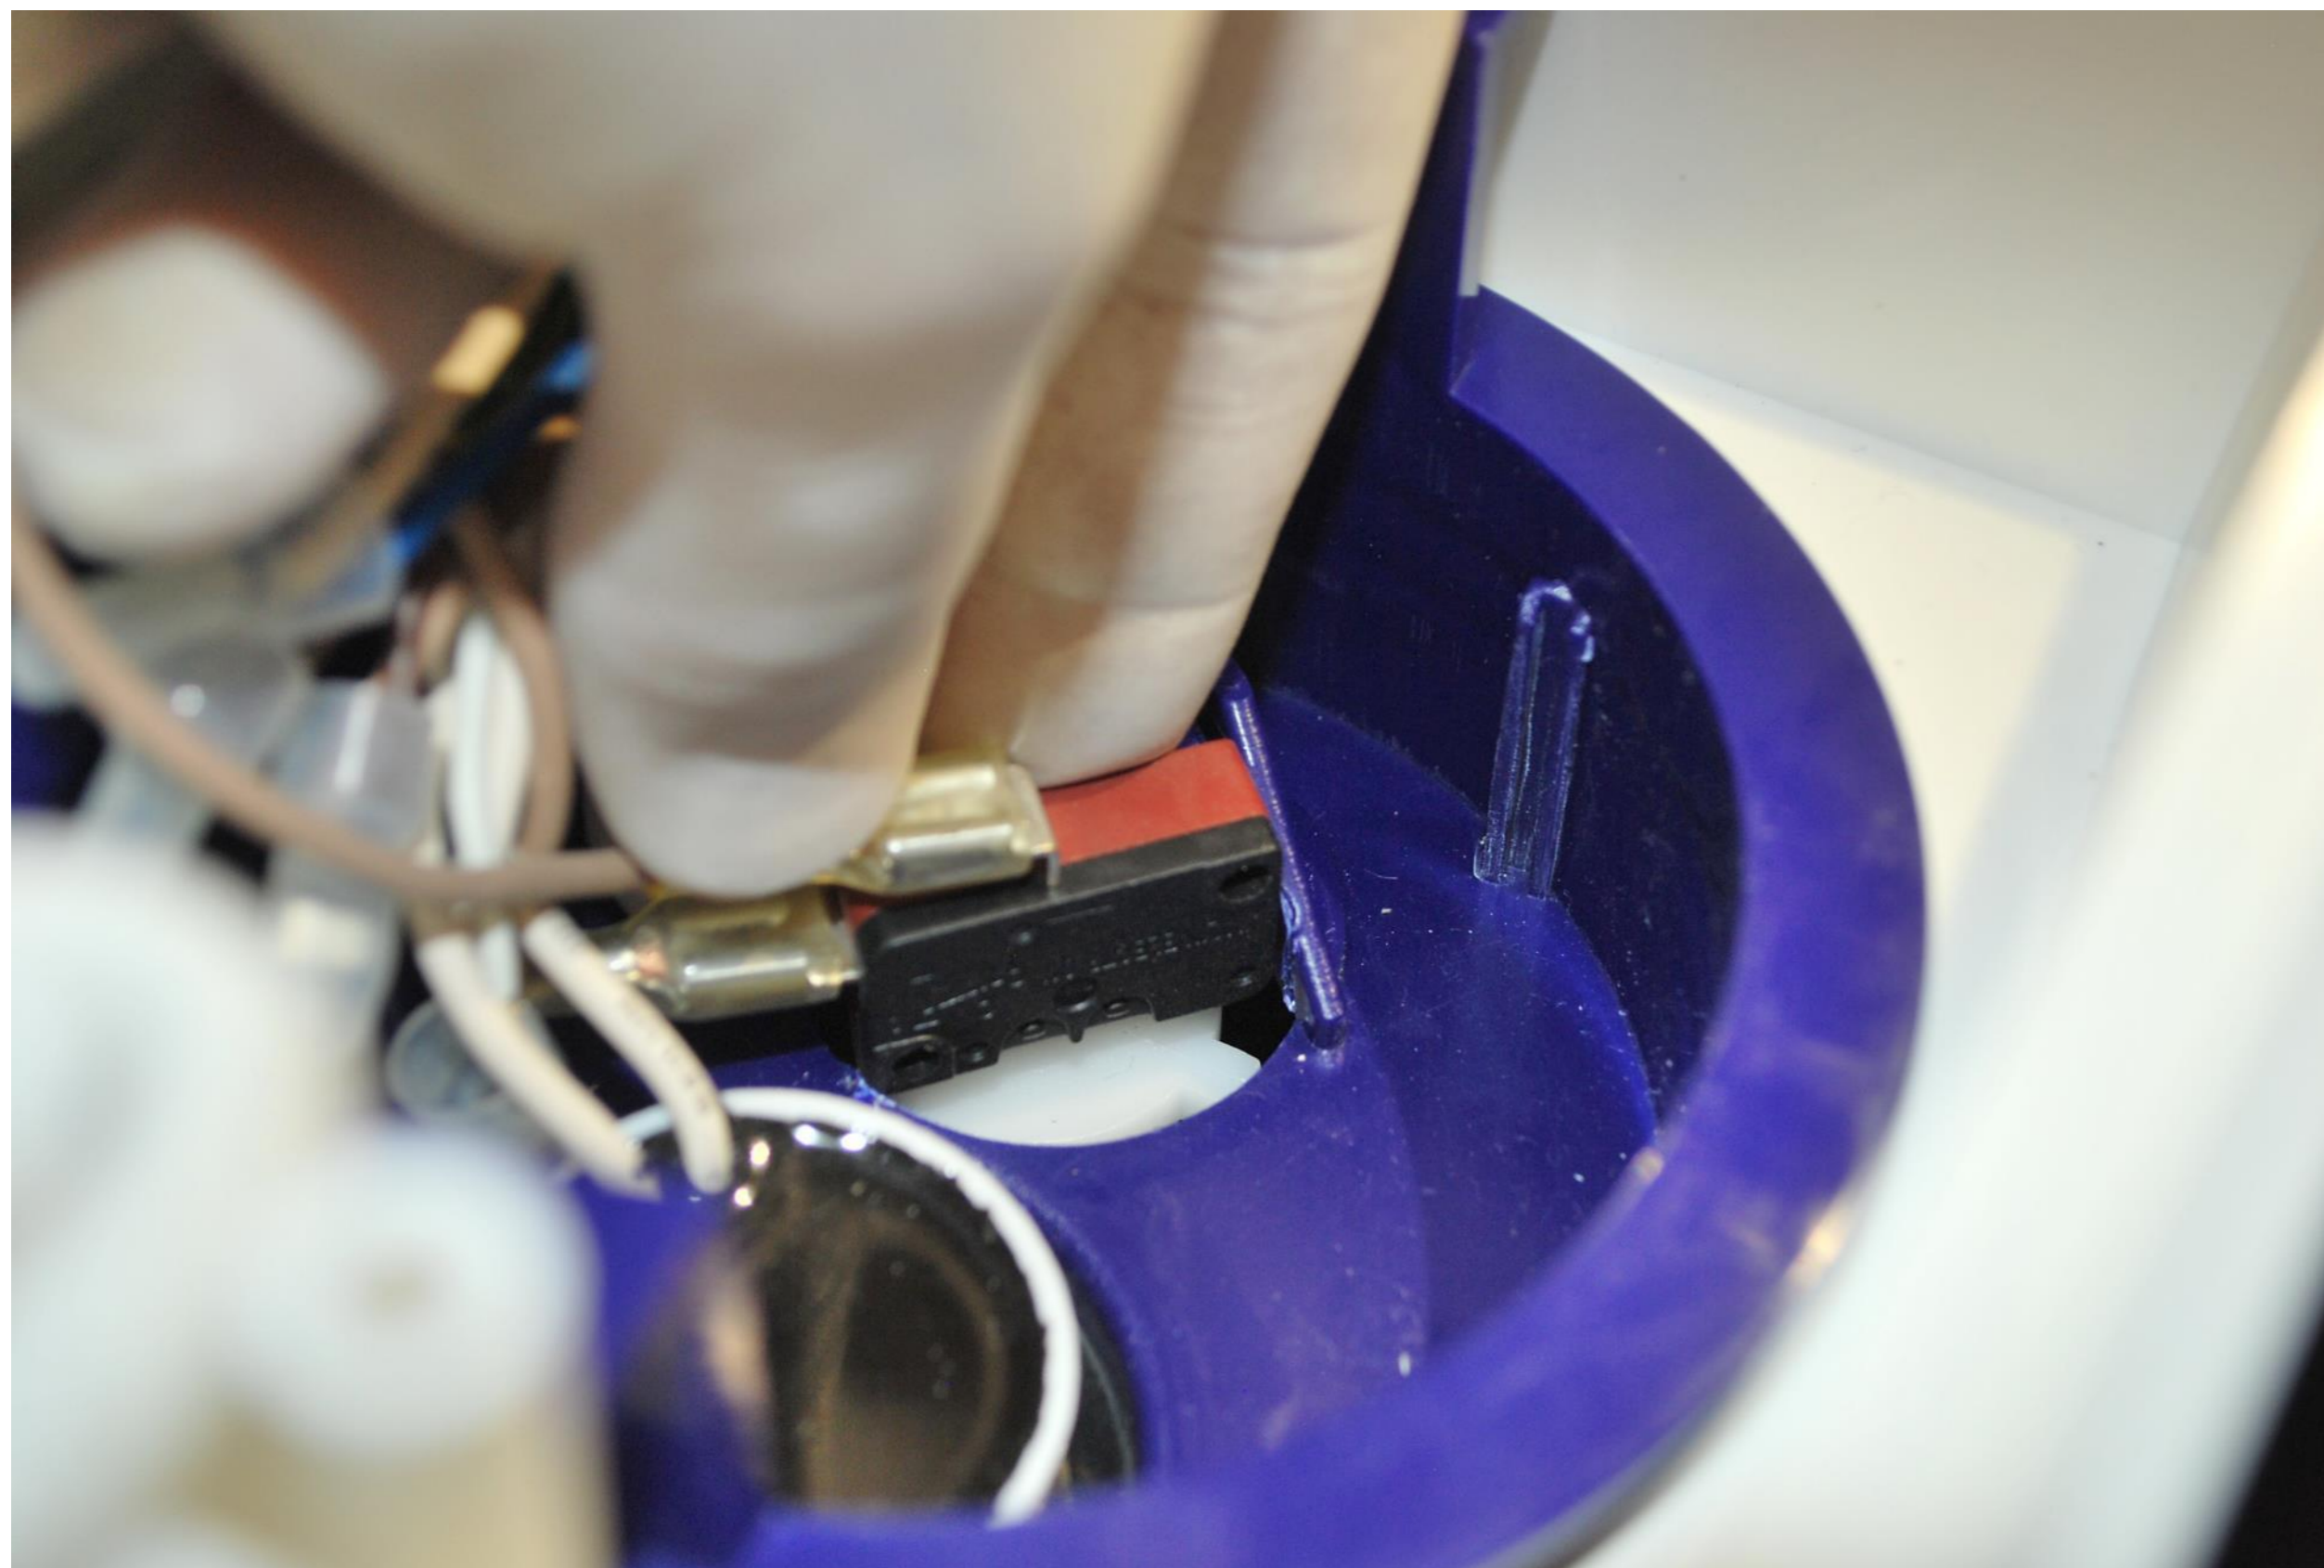

d. Disconnect the micro switch fastons and replace it with a new one (T-PF.P120)



4. HOW TO CLEAN THE WATER LEVEL SWITCH

a. Unscrew the cap with the switch symbol 



b. Remove the cap



- c. Take off the capacitor by pulling it outside and place the capacitor and the micro switch beside the unit



d. Rotate the blue cover clockwise and pull it outside



e. Remove the water level switch and clean it using fresh water



f. Once the maintenance is completed reassemble the unit following inverse procedure